







Fastener Selection

FASTENER#	DESCRIPTION	USE
1.	 No. 8 x 1" Modified Truss Head Wood Screw	Panel to wood deck or trim to wood attachments (unexposed)
2.	 No. 12 x 3/4" Stitch Screw	Panel to panel or trim to panel attachments. May be used as an alternative to blind rivets
3.	 No. 14 x 1" Metal-Wood	Panel to wood deck at valleys, eave start panel at gable attachments, and endlaps. (exposed)
4.	 STST-42 Stainless Steel Rivet 1/8" x 1/8"	Trim to trim attachments (lapped joints)
5.	 No. 10-12x1" Pancake Head Wood Screw	Use when fastening panel to wood deck for increased wind uplift resistance (unexposed).


Notes:

- The table above shows the fasteners required for Skyline Roofing®. Refer to the panel installation and flashing details of this manual for specific screw usage and spacing.
- Panel attachment screws must be long enough to fully penetrate through the wood roof decking, or penetrate solid lumber at least one inch.
- All screws must be coated to provide protection against corrosion.
- Exposed fasteners must have sealing washers and should be the same color as the parts they attach.
- Roofing nails are also required, but are not furnished by ASC BP.
- Screws must be properly driven to ensure proper seal and holding strength. Do not underdrive or overdrive the screws.
- Stainless steel rivets are not watertight.

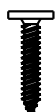
Proper Installation of Gasketed Fasteners

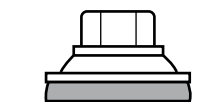

Correctly Driven

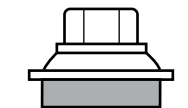

Under Driven

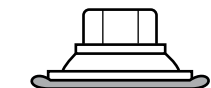

Over Driven