


Vented Ridge Flashing

Note: The gable flashing must be installed prior to installation of the ridge. (See page 23)

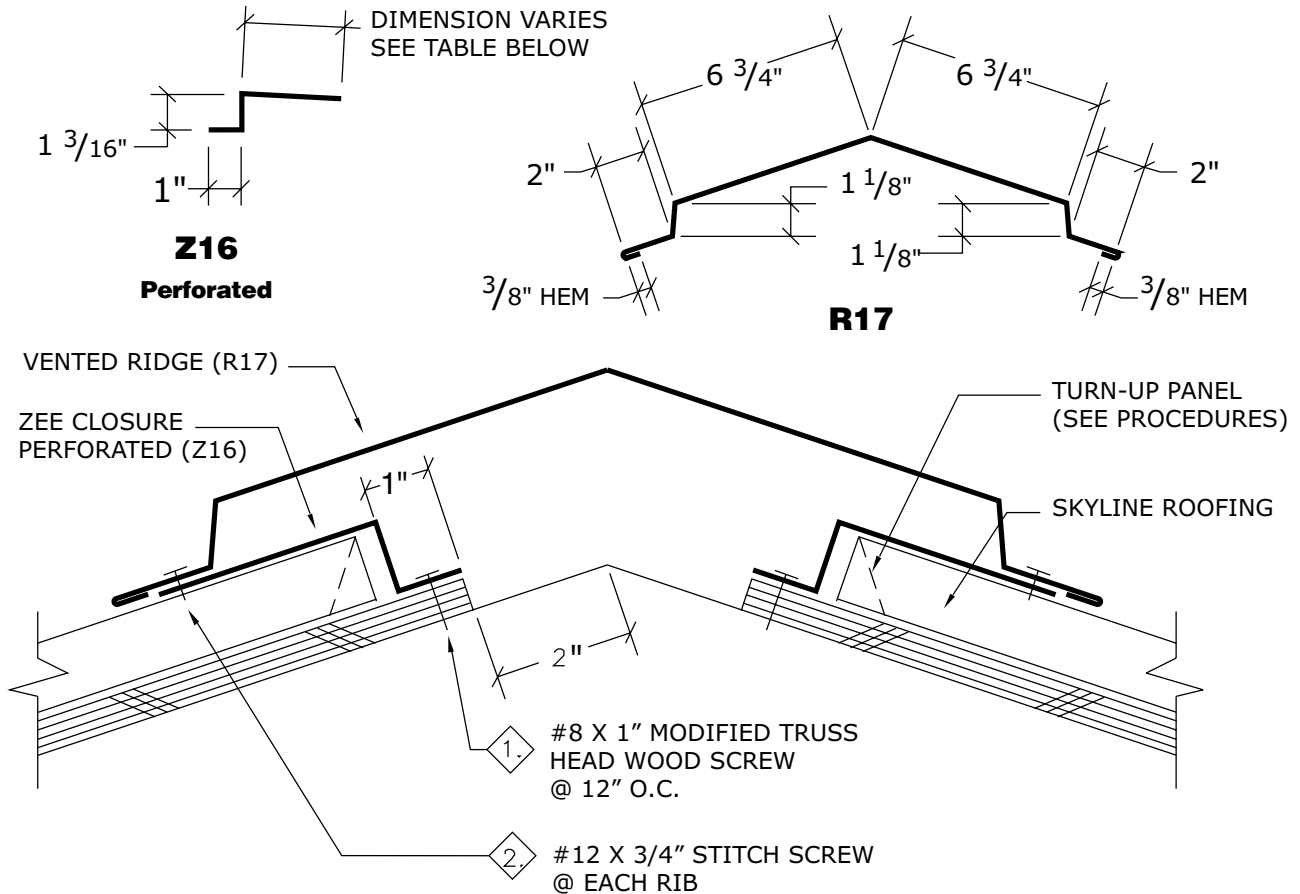

Procedures

- Plywood should be held back 2" from each side of the ridge.
- Locate the panels down from the edge of the plywood as required. Provide space between perforated zee closure "Z16" and end of panel to allow for expansion of the panel. Check the overhang at the eave. (See pg. 9).
- Turn-up panel and caulk (ProSeal 34 is recommended) at the sides near the ribs. For increased weather tightness add neoprene closure below panel turn-up.
- Attach the perforated zee closure "Z16" at the top edge of the plywood and parallel to the ridge.

- Fasten the vented ridge "R17" to the zee closure using #12 x 3/4" stitch screws. (Adjacent to the panel ribs when possible).

Roof Pitch	Zee Dimension
3:12-6:12	4 1/2"
7:12-9:12	3 3/4"
10:12-12:12	2"

- Caulk (ProSeal 34 is recommended), lap and rivet sequential flashings. (See pg. 48).
- Close the ends of the ridge cap by slitting and folding material at each end, caulking joints, and fastening with rivets. (See pg. 13).