



## Eave Transition

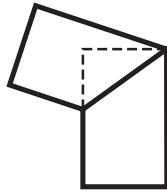

**K41**

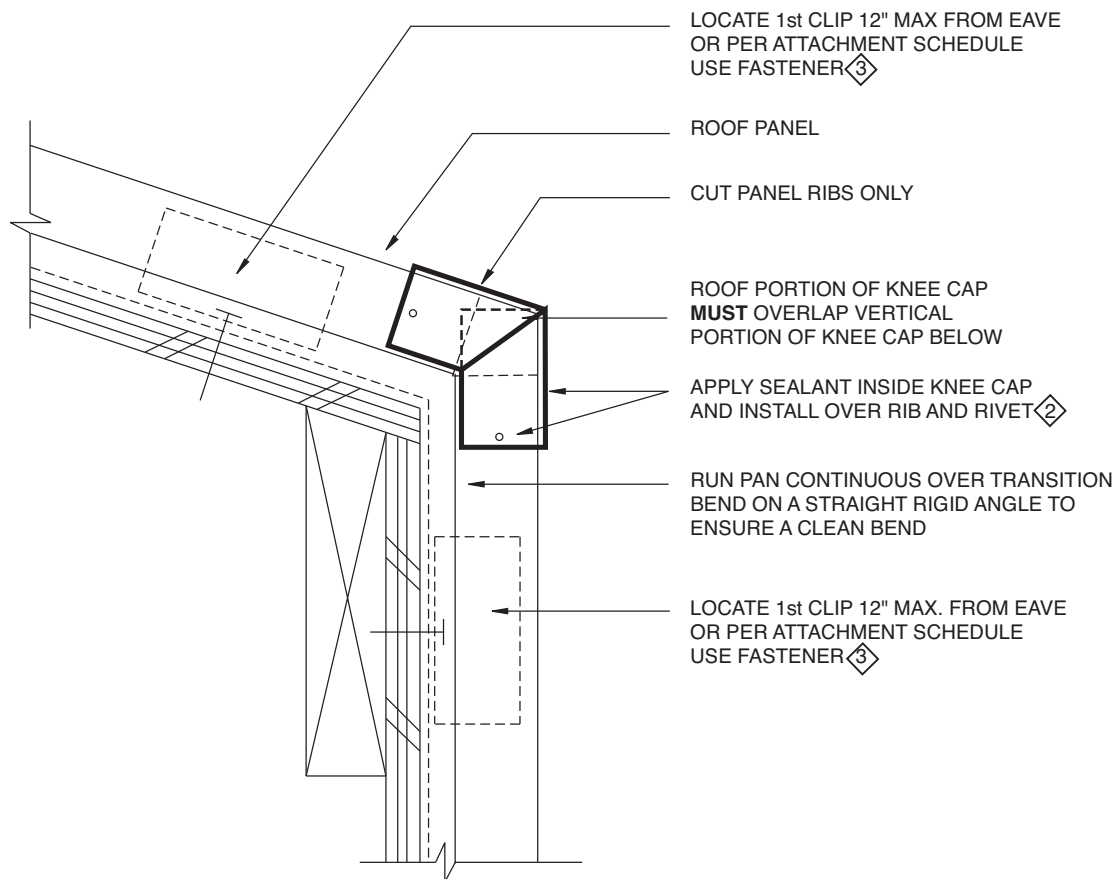

### Procedures

- Cut the panel ribs only where the panel is to bend. Bend panels over a straight, rigid angle to ensure a clean bend
- Attach the roof panels
- Caulk (ProSeal 34 is recommended) and cover the rib gap with the knee cap flashing and rivet
- Due to expansion and contraction, this detail should not be used when panels greater than 40 ft. are used.
- This detail is not recommended for snow locations.