
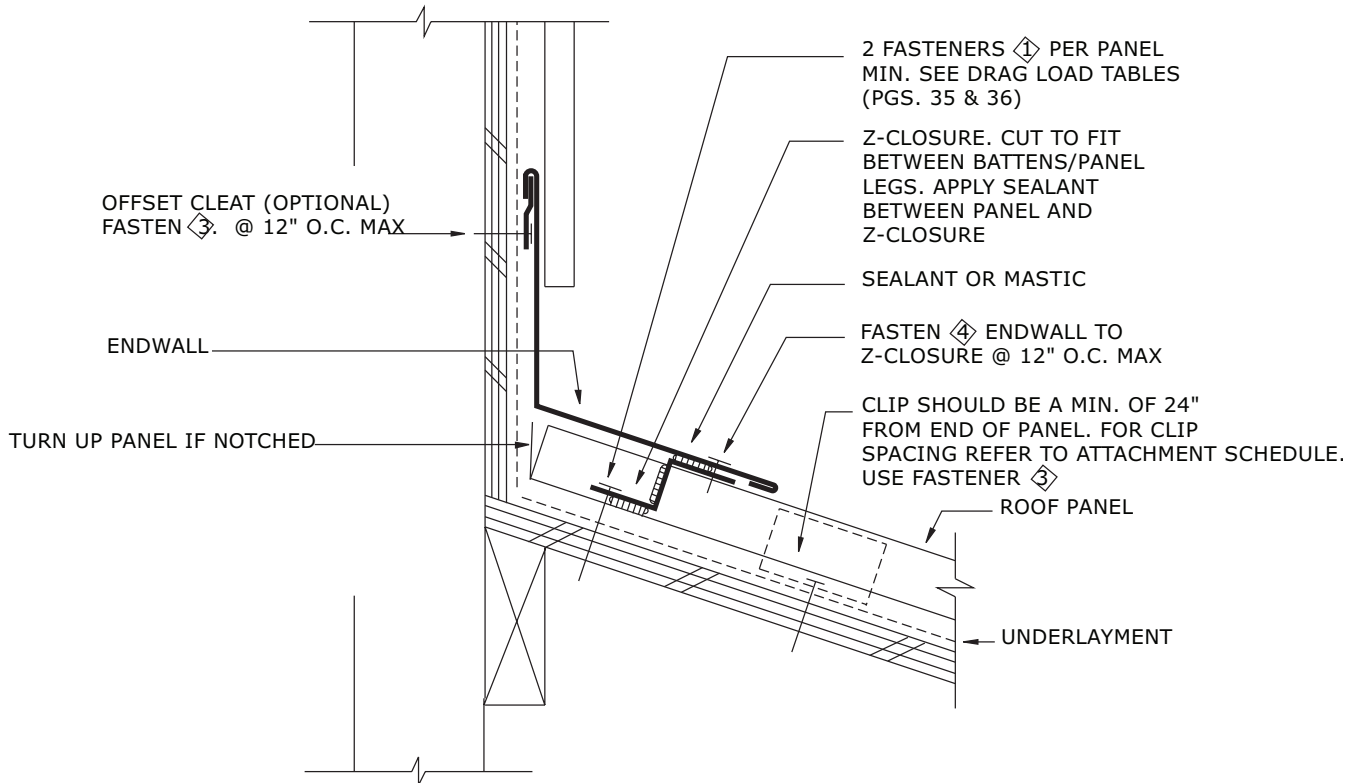


Endwall Flashing

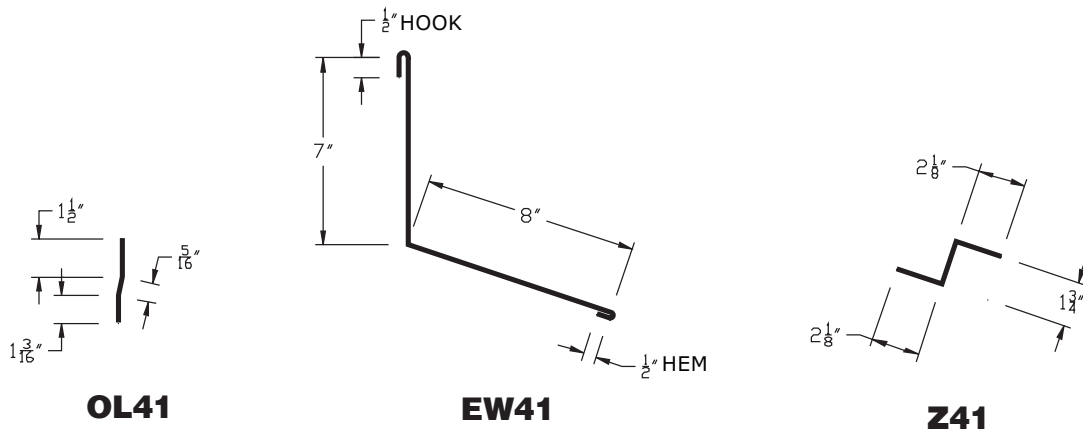

Procedures

- Turn up end of panels if notched
- Locate the panels down from the endwall as required and position Z closure so that the endwall flashing will conceal it.
- Caulk (ProSeal 34 is recommended) top, sides, and bottom of the Z Closure. Check the overlap at the eave before fastening the Z Closure to the substrate.
- Fasten Z Closure to the substrate and endwall flashing to the Z Closure.
- Caulk (ProSeal 34 is recommended), lap, and rivet sequential flashings. We recommend that maximum accumulated length of flashings do not exceed 40 ft.