



Vented Ridge Flashing

Note: The gable flashing must be installed prior to installation of the ridge. (See page 15)

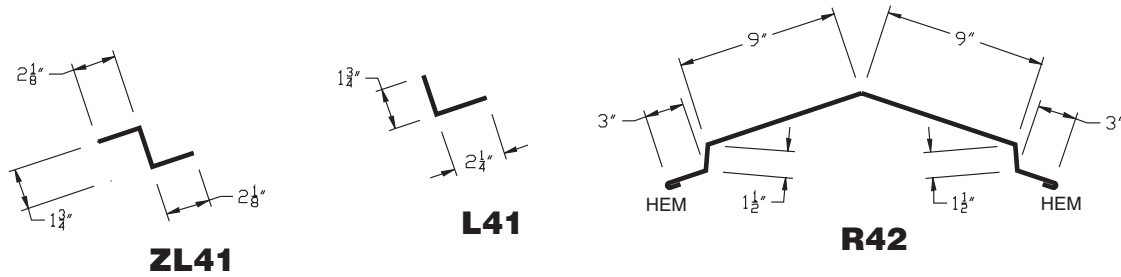


Z-CLIP (PRE-PAINTED TO MATCH ROOF PANELS) WITH 1 FASTENER PER CLIP. APPLY SEALANT OR MASTIC BETWEEN PANEL AND CLIP.

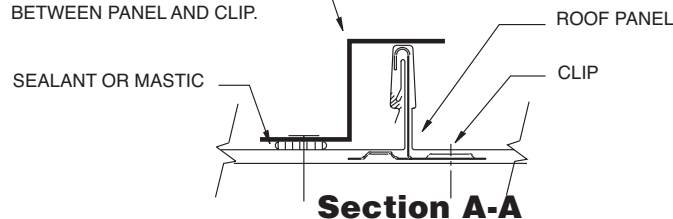

2 FASTENERS \diamond PER PANEL
MIN. SEE DRAG LOAD TABLES

L-CLOSURE. CUT TO FIT BETWEEN BATTENS/PANEL LEGS. APPLY SEALANT BETWEEN PANEL AND L-CLOSURE.

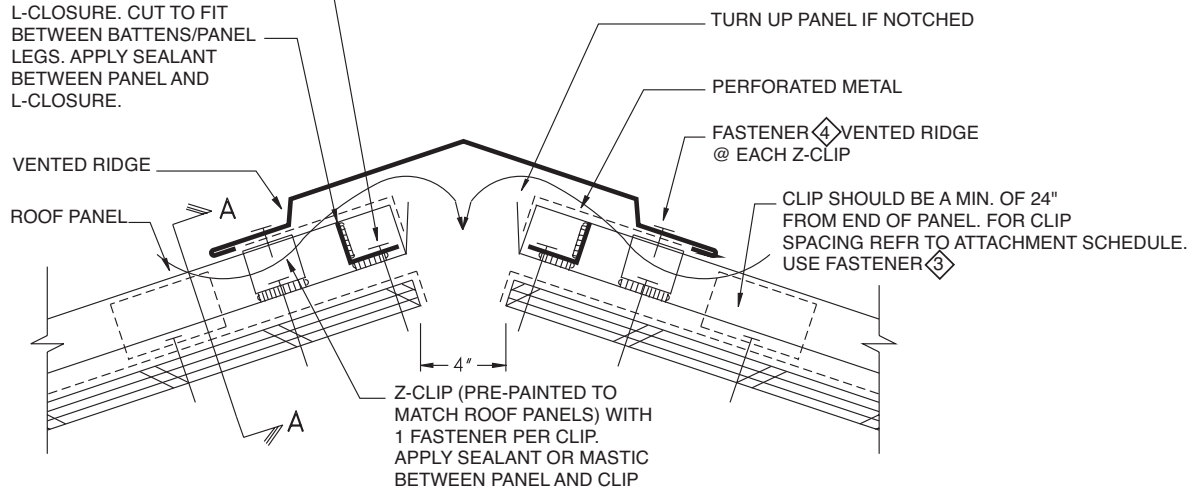

Procedures

- Turn up end of panels if notched.
- Locate the panels down from the top edge of the plywood as required.
- Caulk (ProSeal 34 is recommended) the bottom and sides of the L Closure. Locate the L Closure so that air may pass through the perforated closure. Check the overlap at the eave before fastening the L Closure to the substrate.
- Locate the Z Clip so that the Vented Ridge can be fastened to it.
- Caulk (ProSeal 34 is recommended) the bottom of the Z Clips and fasten.
- Set the perforated metal on top of the roof panel and Z Clips. Fasten the Vented Ridge flashing, perforated metal and Z clips as shown.
- Caulk (ProSeal 34 is recommended), lap, and rivet sequential flashings. We recommend that maximum accumulated length of flashings do not exceed 40 ft.
- Close the end of the Vented Ridge Cap by slitting and folding the material at each end, caulking joints, and fastening with rivets (See vented ridge termination).